
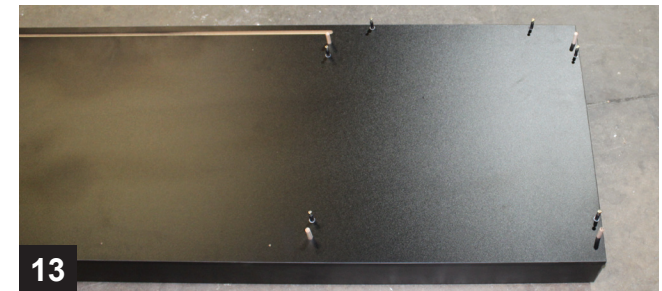
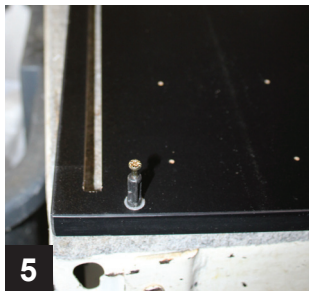
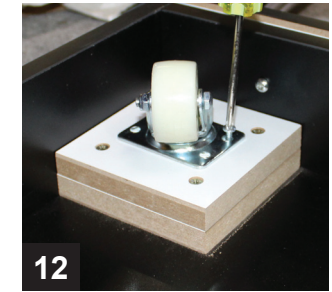
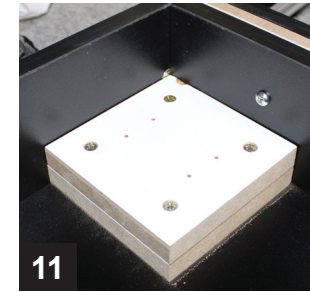
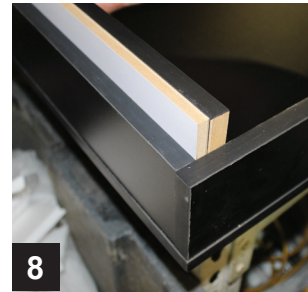
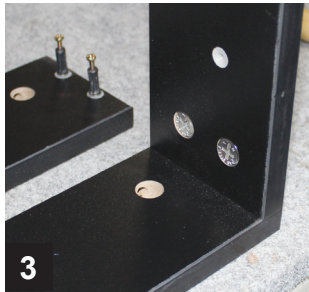
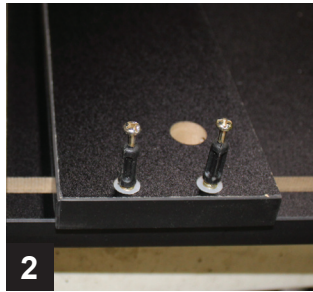
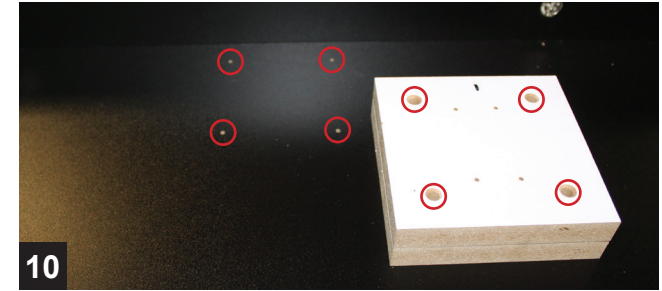
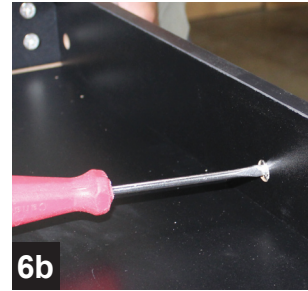
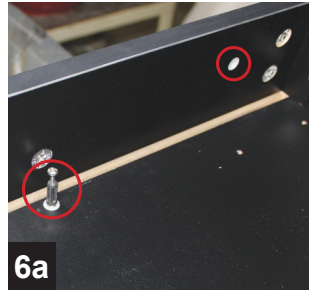
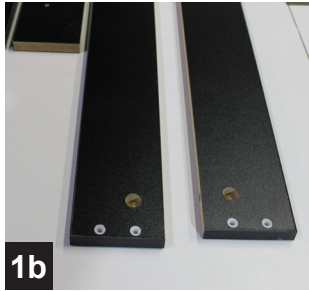


#230691

Premium Frameless Counter Combo Showcase

60" x 20" x 38 3/8"

Important note: Please refrain from using power tools as they may damage the boards.

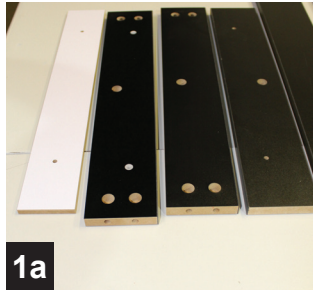

Base

1. Locate the six base boards shown (1a,1b).
2. Thread 8 cam pins into the pre-inserted nuts in the front and back boards from (1b).
3. Attach each side board to a front/back board by securing the pins with 2 cam locks.
4. Attach the remaining front/back board by securing the pins with 4 cam locks.
5. Locate the bottom board and thread 12 cam pins into the pre-inserted nuts.

Base

6. Lower the base onto the bottom board. Place the components shown in (6a) on the same side. Secure them together with 10 cam locks (6b).
7. Use the two phillips screws to join the reinforcement board and the glass support board together. Thread the screws to connect the two boards.
8. Place the boards into position.
9. Tighten the screws and cam lock.


Base

10. Position the caster base plates with the pilot holes.
11. Use 4 wood screws to secure each of the caster base plates to the bottom board.
12. Assemble the casters to the base plates using the pilot holes as a guide.
13. Rotate the base right side up. Thread the 6 cam pins and insert the 4 dowels.


#230691

Premium Frameless Counter Combo Showcase

60" x 20" x 38 3/8"

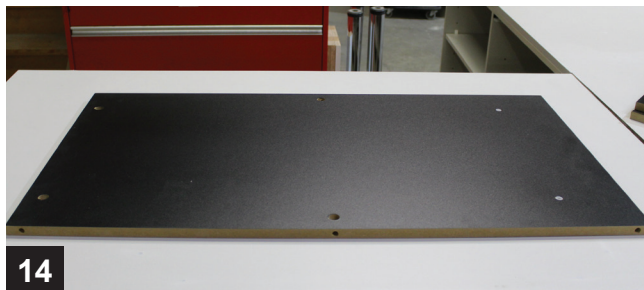

14

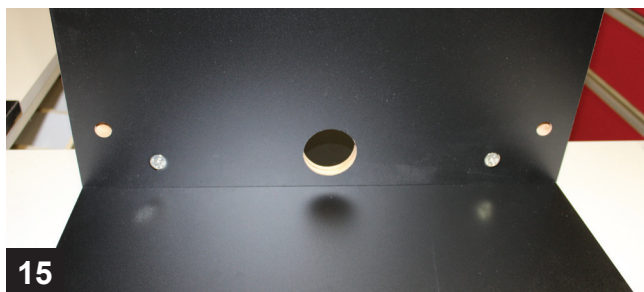

15



16

Main


14. Locate the front board and insert the two cam pins.

15. Place the top board on the front board and tighten with 2 cam locks.

16. On each side board insert the 4 dowels, 3 cam pins and the drawer rail.



17

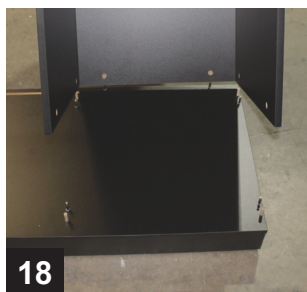

18



19



20a



20b


Main

17. Position the left side board as shown and secure with 3 cam locks. Repeat for the other side.


18. Place the assembly on the base and tighten with 6 cam locks.

19. Slide the side glass through the insert channel on the bottom board. We recommend having someone hold the glass pieces until step 21 is complete.


20. Place the rubber spacer in the top hole of the side glass (20a). Screw on the 3-way connector (20b).

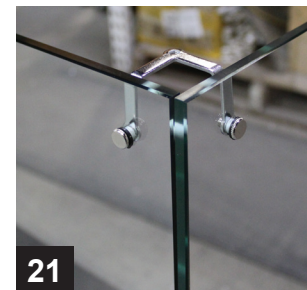

21

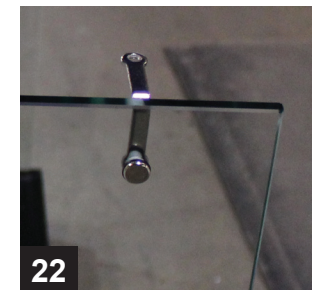

22

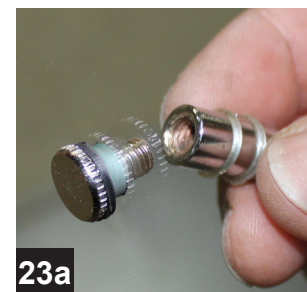

23a



23b



24

Main

21. Slide the front glass into the insert channel on the bottom board. Place the rubber spacer in the glass and secure the 3-way connector to the front glass.

22. Locate the 2-way connector. Insert the rubber spacer into the glass and screw on the connector.


23. Install the shelf pins on the side glass (23a) and on the side panel (23b). Insert the shelves.

24. Gently place the top glass on the assembly. Align the holes in the top glass with the connectors, insert the rubber spacers and tighten the screws.


#230691

Premium Frameless Counter Combo Showcase


60" x 20" x 38 3/8"

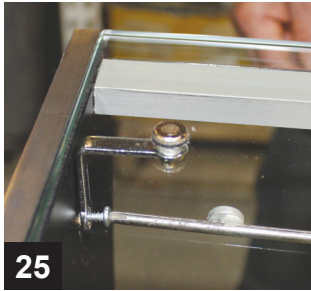


25

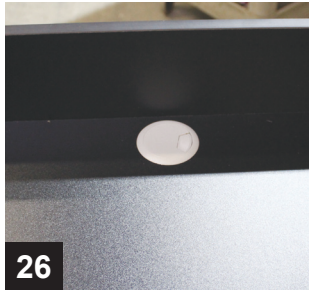


26

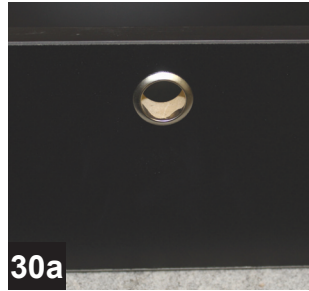

30a

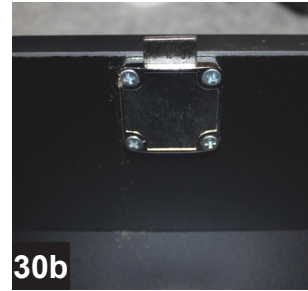

30b

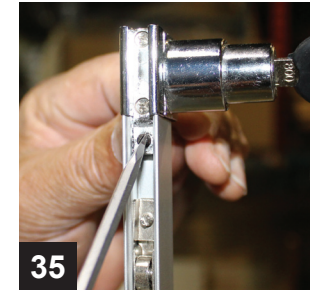

35




36




27



28a

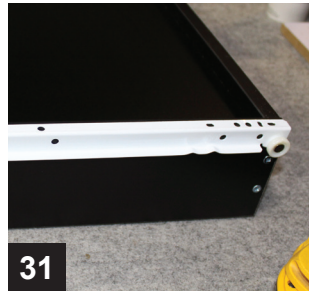

31

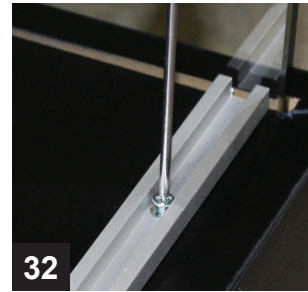

32




28b



29



33

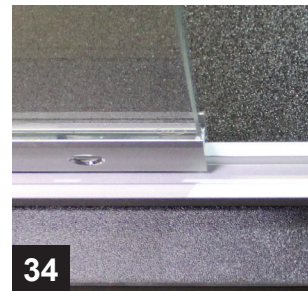

34



Shelves & Main

25. Attach the 2-way connector to the side board and the top glass.

26. Press-fit the plastic grommet in the upper board.

27. Locate the drawer panels.

28. Thread the cam pins into the front drawer board (28a). Insert the drawer base and attach the side boards (28b) with 4 cam locks.

29. Attach back board to the assembly by securing the 4 screws.

Doors

30. Insert the trim washer through the front of the drawer (30a). Place the locking mechanism through the backside of the drawer and secure with 4 screws (30b).

31. Position the drawer rail so that the roller wheels are towards the back. Secure with 3 screws in each.

32. Secure the door track to the bottom board.

33. Unscrew the door hardware and rejoin it through the handle opening on each door.

34. Put the door (with lock hole) on the interior track.

Doors

35. Insert the locking mechanism on the other door and tighten the screw to secure it in place.

36. Place the door with the lock onto the exterior track.